

HYDROFARM COMMERCIAL DIVISION

CATWALK SYSTEM ASSEMBLY INSTRUCTIONS

Complete Instructional Guide





TOOLS NEEDED FOR ASSEMBLY



9/16" SOCKET



MALLET

PARTS LIST

CONFIRM ALL PARTS ARE PRESENT BEFORE STARTING INSTALLATION



Catwalk Stoppers



Catwalk Gate



2' Catwalk Platform*

*2' Catwalk Platform is an optional platform



4' Catwalk Platform



4' Catwalk Platform End

Catwalk Side Beam*



*Catwalk Side Beams come in 8', 10', or 12' lengths



Call 815-991-5010 or email us at sales@innovativegrowersequipment.com if you have any questions



Step #1

Open up the archive carriages to create space to mount the Catwalk Side Beam.

Step #2

Determine where you want to place the Catwalk Side Beam.



Step #3

Use two people to place the Catwalk Side Beam on the location you determined.



Step #4

Secure Catwalk Stoppers at far end of Catwalk Side Beams. Use a 9/16" socket to tighten the bolt.








Step #5

Once both sides of Catwalk Side Beams are installed, move archive carriages close together.

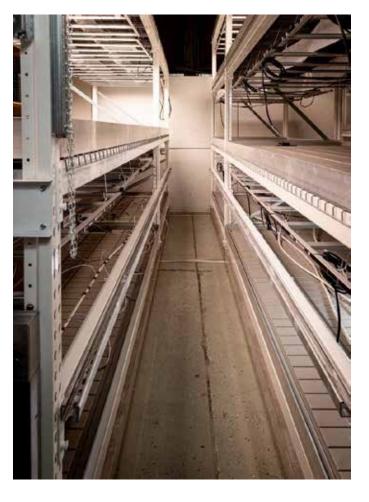

Step #6

Place Catwalk Platform End rollers inside the u-channels on the Catwalk Side Beams.








Step #7

Push Catwalk Platform to the stoppers.

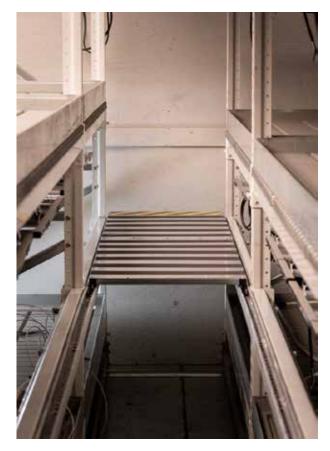

Step #8

Continue to add Catwalk Platforms until the end.







Step #9

Slide one Catwalk Stopper on one Catwalk Side Beams until it is up against the Catwalk Platform. Repeat on other Catwalk Side Beam.



Step #10

Tighten Catwalk Stopper bolts with a 9/16" socket.







Step #11

Ensure that the platforms are secured and will not move prior to stepping up onto them.



Step #12

Step up onto Catwalk Platform*



*Ladder not included





Step #13
Attach Gate Behind you.



CONGRATULATIONS YOUR CATWALK SYSTEM IS COMPLETE!

