


### **DRY RACK ASSEMBLY INSTALLATION**

**Complete Instructional Guide** 






### **TOOLS NEEDED FOR INSTALLATION**

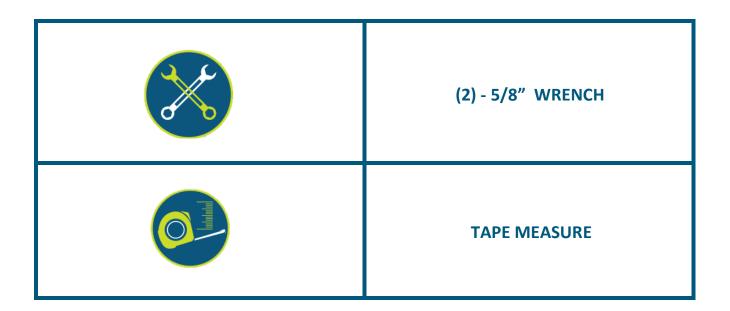



### **PARTS LIST**

#### CONFIRM ALL PARTS ARE PRESENT BEFORE STARTING INSTALLATION

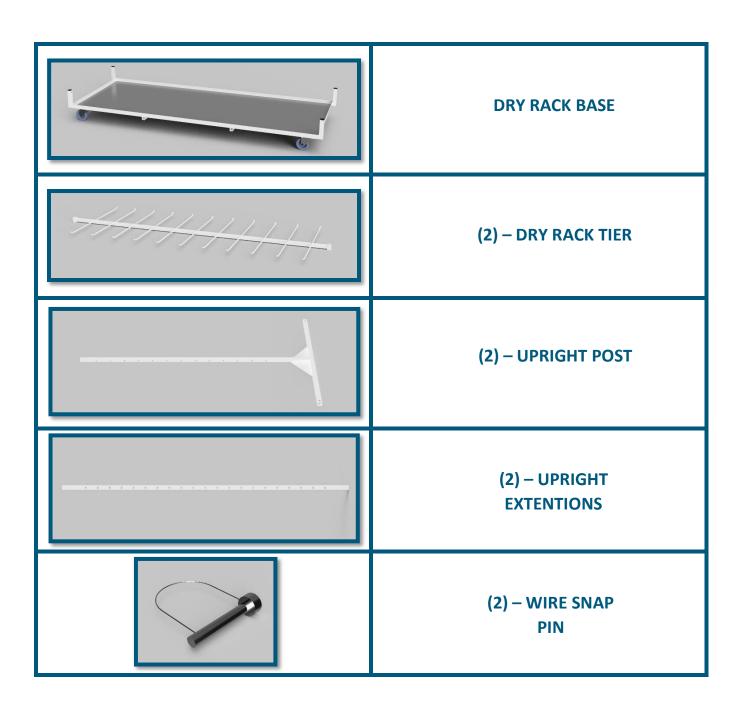




### **FOLLOW INSTRUCTIONS BELOW**

## STEP #1 INSTALLING UPRIGHTS.

- Place first upright on the **Inside** of upright supports on end of base frame, line existing holes up and insert 7/16-14 hardware from outside going in. *Shown Fig. 1a.*
- Repeat same steps for second upright. *Shown Fig. 1b.*



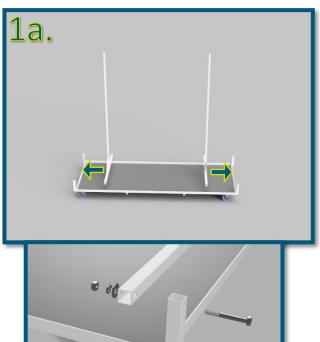

 Tighten hardware down on all 4 corners until split lock washer sits flat.

# INNOVATIVE GROWERS EQUIPMENT INC. USA

### DRY RACK ASSEMBLY INSTRUCTIONS

# STEP# 2 Install Dry Rack Tier


Note: 2 Person Step


Align Dry Rack Tier ends up with installed uprights, lower tier down to desired height. *Shown 2a*.

Note: Make sure Tiers are lowered at a level consistency, if not tier will bind and be put in a stuck position.

Once Tier reaches desired height install Wire Snap Pin in closest hole to the bottom of connection point. *Shown Fig. 2b.* 

Repeat same step for 2<sup>nd</sup> Dry Rack Tier

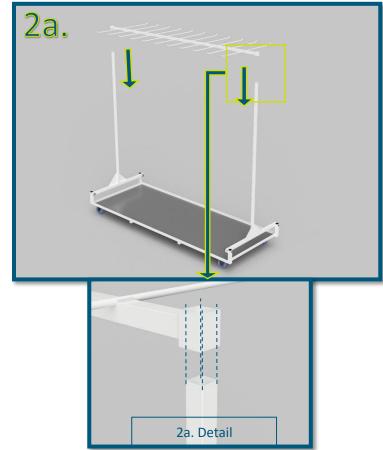

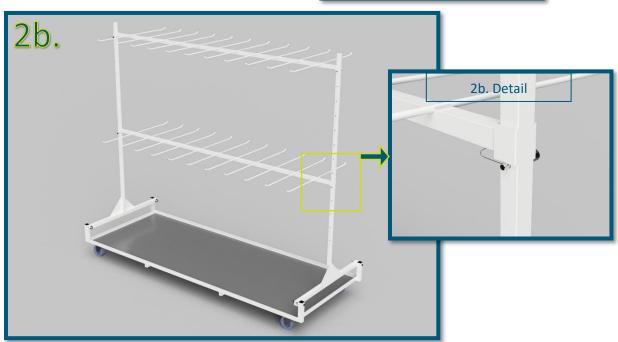



# STEP #3 Installing Dry Rack Tiers W/ Upright Extension


Note: 2 Person Step

### If Applicable:

With 1 tier installed, insert Upright Extension in the opening on the top of installed Upright. Shown Fig. 3a.


Extensions should slide down to the Snap Wire Pin. Remove pin and raise tier while holding on to extension at desired height so through-holes are aligned. Place pin below tier (same as step 2b) through aligned holes in Upright and Extension. Shown Fig 3b.

2<sup>nd</sup> Tier will be installed on extension using the same method as step 2a. Additional diagrams showed on page 7.

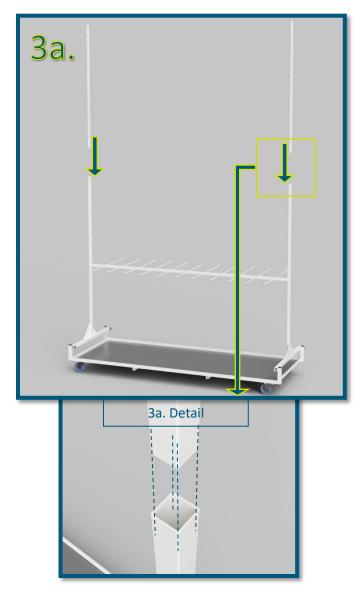





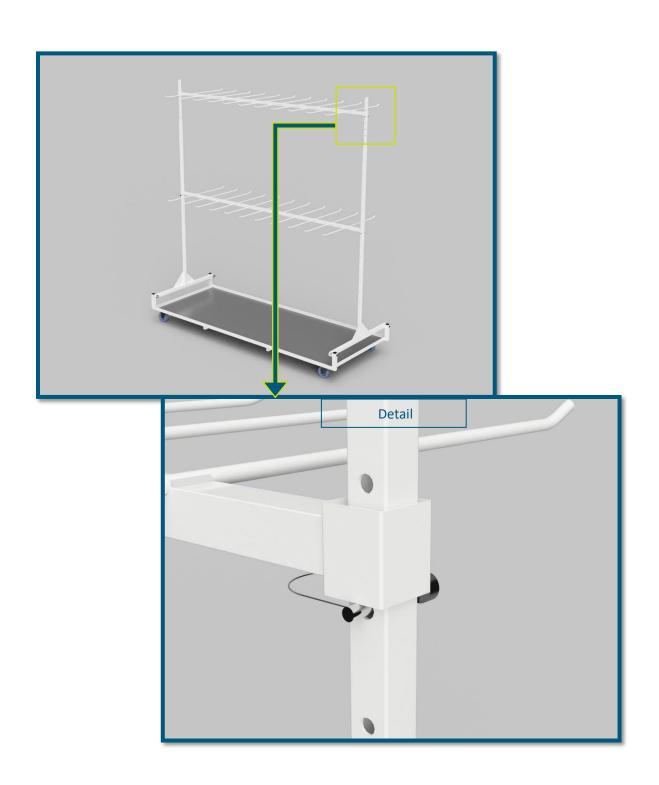





# CONGRATULATIONS YOUR DRY RACK UNITS HAVE BEEN ASSEMBLED!

